

Installation and assembly conditions

Air pressure:

Air pressure supply: Screw connection ¾"1 litre/sec with 6 bar

After the layout is clear, STOPA will give the customer the date by when the air pressure needs to be supplied.

Air pressure pipes incl. oiler units up to the user have to be provided by the customer.

Environment:

Ambient temperature: +10°C to +40°C

Temperatures exceeding 40° C require special measures (not included).

Assembly conditions:

It is essential that our staff can commence work without obstructions.

Additional costs arising from obstructions not caused by STOPA must be paid by the customer.

A safe room must be provided in the vicinity of the building site to store the assembly equipment and tools.

The necessary electrical power for assembling must be provided by the customer free of charge.

There must be sufficient lighting at the installation side provided by the customer.

If not otherwise stated all costs for hoists, cranes and fork lifts have to be paid by the customer.

The installation site must be dry and protected against poor weather. The customer is responsible to ensure that the temperature at the installation site is not less than +10°C.